

Web Application: Field User's Manual

Version: January 12, 2006

Before You Begin

- Use **Internet Explorer 5.0** or later to run the **PCS Web Application**. Netscape does not function as well and may have unknown compatibility issues.
- The PCS Web Application has been optimized for screen resolutions of 1024 x 768 or higher. Lower resolutions could result in the need to scroll to see the entire screen.
- While using the PCS Web Application, do not use the Internet Explorer **Back** and **Forward** buttons. Use the navigational buttons provided by the web application.
- The PCS Web Application requires a DOT Email account. If you do not have one, please contact your Division Computer Consultant to request one. Once you have been assigned an email account, contact PMU to have your username added to enable access.

Logging onto PCS

https://apps.dot.state.nc.us/pmu/pcs/



Follow these steps to log on to the PCS Web Application:

- 1. Type your **DOT Email username**. (*ie.* **jdoe** is the username for <u>JDoe@dot.state.nc.us</u>)
- 2. Type your **DOT Email password**.
- 3. Choose **Yes** to enter the training database. Choose **No** to enter the live production server
- 4. Click the **Sign On** button.


Route Lookup

Once logged in you should see the **Route Lookup** navigational bar. This bar lists all counties in your assigned division:




This navigational bar allows you to choose routes at anytime and from anywhere within the web application.

To choose a county, simply click on it. A list of all routes associated with the county will expand. You can choose your route either by scrolling through the list or by typing the route into the space provided. Clicking the route you wish to view/edit will take you to the **Section List** for that route.

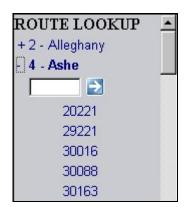

Section List

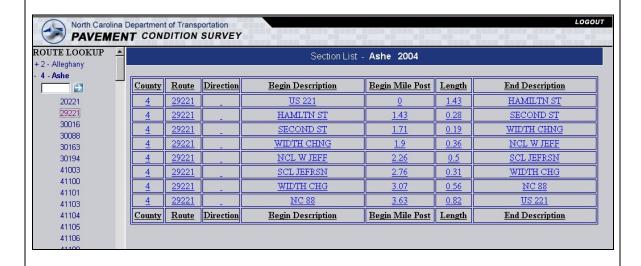

The Section List displays the following basic information for each section within the chosen route

- County
- Route
- Direction
- Begin Description
- Begin Mile Post
- Length
- End Description




The **Section List** is an inventory of all sections associated with the **county and route** you selected from the list in **Route Lookup**. From this screen, you may choose the section you wish to **view/edit** by clicking on any field within the row. Doing this will take you to a **detailed view** of the chosen section.

If a route has only **one** section, then the web application automatically brings up the **detailed view** of that section.



Detailed Section Information

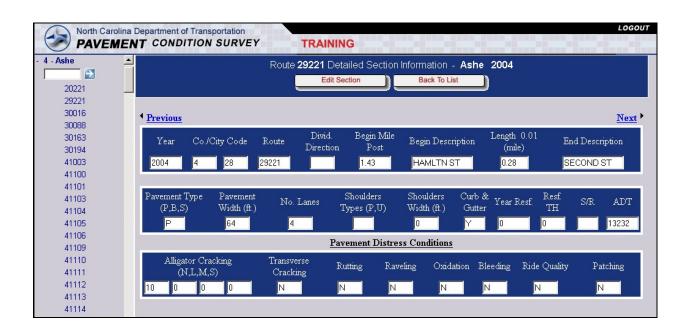


Once a **route section** is selected from the **Section List**, the application expands to show detailed information about that particular section. (See the *Guide to the PCS Data Entry Sheet* at the end of this manual for descriptions of all the fields displayed.)



You can scroll through all sections of the route using the navigational links. If the **Previous** link is unavailable, you are currently at the beginning of a route. If the **Next** link is unavailable, you are currently at the end of a route.

If you wish to edit the section data, click Edit Section .	Edit Section
To return to the Section List, click Back to List.	Back To List

Detailed Section Information Editor

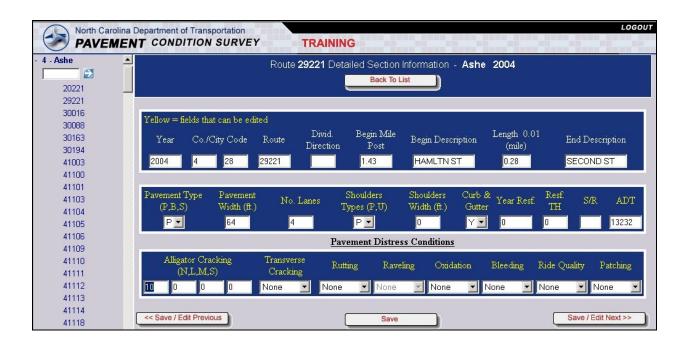

When choosing to edit data, all fields that you have permission to edit are highlighted in yellow. Normally this includes the last two rows. To edit a field, follow these steps:

- 1. Click in the field that you wish to edit.
 - By default, the cursor begins in the Alligator Cracking distress field.
- 2. Enter the new value.
 - Refer to the *Guide to the PCS Data Entry Sheet* for restrictions on how you should enter data.




- 3. Press **TAB** to move to the next field.
- 4. To **save** your changes, click the **Save** button at the bottom of the page.
- 5. To save your changes and advance to the **next** section in the route, click the **Save/Edit Next** button.
- 6. To **save** your changes and advance to the **previous** section in the route, click the **Save/Edit Previous** button.
- 7. When you have reached the end of the route, the **Save/Edit Next** button will disappear. Be sure to click the **Save** button before selecting another route or your changes will not be saved.
- 8. To view/edit another route, simply click on a route from the **Route Lookup** navigational bar or type in a new route number.

To return to the Section List, click Back to List.



Logging Out

Once you have finished with the web application, you may logout by clicking the **Logout** link in the upper-right corner of the application:

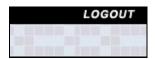

You will receive the following message when you have successfully logged out:

We recommend that you close your browser after logging out to insure security and proper functionality for the next time you log in to use the PCS Web Application.

You have been Logged out.

Thanks for using the

Pavement Condition Survey System


Click here to Login.


Guide to the PCS Data Entry Sheet

Note: Only PMU employees can modify these fields.

CO-CITY CODE: 2 digit numeric codes for the county and city/town in which the route section lies. The city code is blank if a section is outside the city limits.

ROUTE: 5 digit code for the route being surveyed. A direction code (N,S,E,W) will immediately follow the route code if it is a divided highway. If it's not a divided highway, but has a direction code, please make a note so we can fix the error.

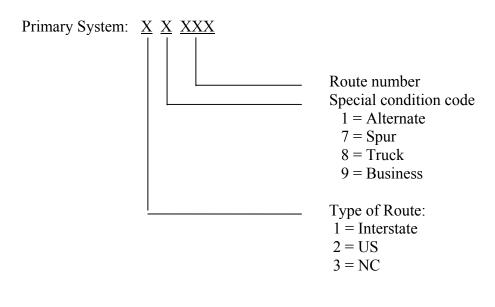

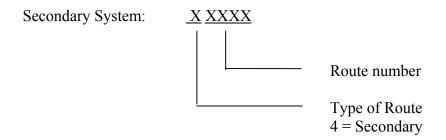

BEGIN MILEPOST: This indicates the milepost of the beginning point of the section. Unlike the old mainframe system, the decimal must be entered for the milepost values. (5.13 vs. 513)

BEGIN DESCRIPTION: Brief description (10 Characters) of the beginning of the section. Not accessible to division personnel.

SECTN LENGTH: Length of the section. Again, the decimal must be typed in.

END DESCRIPTION: Brief description (10 Characters) of the end point of the section.

Field personnel can modify the remaining fields:

PAVMNT (Pavement):

T = Pavement Type, either P (Plant Mix), B (BST) or S (Slurry)

WI = Pavement Width, excluding any paved shoulders

L = Number of through lanes, including continuous center left turn lanes

SLDR (Shoulder):

T = Shoulder Type, either P (Paved) or U (Unpaved)

WI = Width (average for section); paved shoulder must be continuous on both sides.

C - G (Curb and Gutter):

Y = Yes, must be continuous on both sides; N = No, including one side only.

Required Length: 0.50 mile – Rural, 0.30 mile - Urban

YEAR RESF: Indicate year of latest resurfacing

TH: Indicate thickness of latest resurfacing

S, R: (S = subdivision road, R = rural road)

ADT: Average Daily Traffic on the route section

ALLIGATOR CRK: Alligator Cracking with the percent of the section rated for the four severity levels of (N)one, (L)ight, (M)oderate, or (S)evere. Percentages are recorded on the data sheet as 01 (10%), 02 (20%), ... 10(100%).

TRV: Transverse Cracking, rated with one letter: (N)one, (L)ight, (M)oderate, or (S)evere.

RUT: Rutting, rated with one of the four letters, (N,L,M,S)

RAV: Raveling, rated with one of the four letters, (N,L,M,S). Only sections with pavement types of B or S should be rated for raveling. If pavement type is P, it should be recorded as N.

OXD: Oxidation, rated with one of the four letters, (N,L,M,S). Only sections with pavement type P should be rated for raveling. If pavement type is B or S, it should be recorded as N.

BLE: Bleeding, rated with one of the four letters, (N,L,M,S)

RID: Ride Quality, rated with one of the three letters as follows: (L)ight (Average), (M)oderate (Slightly Rough), (S)evere (Rough)

PAT: Patching, rated with one of the four letters, (N,L,M,S)